


Quick Reference

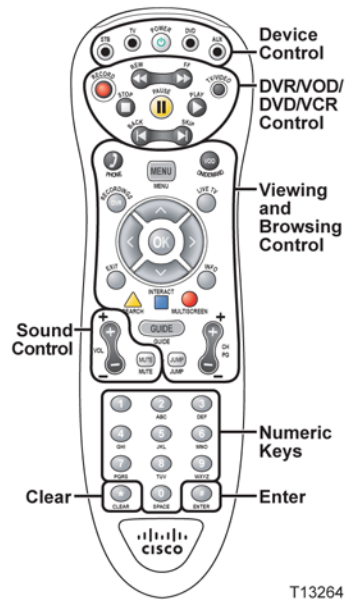

T13264

Device Control

- Turns devices on or off
- Enables set-top mode functions
- Enables TV mode functions
- Enables DVD mode functions
- Enables AUX mode functions

DVR, VOD, DVD, VCR Control

Notes:

- In STB mode, these keys control DVR and VOD functions.
- In DVD and AUX modes, these keys may control your DVD or VCR depending on how you have programmed the remote.

- Records the selected program
- Stops DVD, VCR, VOD, or DVR content
- Pauses DVD, VCR, VOD, or DVR content
- Plays DVD, VCR, VOD, or DVR content
- Scrolls through available TV or video input sources

- Rewinds or fast forwards through DVR or VOD content

- Skips backward or forward through DVR or VOD content

Viewing and Browsing Control

- Accesses the phone menu
- Accesses the Interactive Program Guide (IPG)
- Accesses the On Demand menu
- Accesses the DVR list of recordings
- Views live TV
- Moves through selections
- Selects and deselects screen items
- Clears all menu screens and returns to broadcast TV
- Accesses the Search menu
- Accesses INTERACT content (Internet and interactive content)
- Turns MultiScreen mode on or off
- Displays text information about the selected program
- Displays or closes the IPG
- Jumps to next section or switches to last channel viewed
- Selects the next channel, up or down, when watching TV. Moves up or down one page in the IPG and in some menu screens

Sound Control

Note: These keys are assigned to the TV when the TV mode key is programmed with a valid code.

- Adjusts volume
- Mutes sound

Numeric Keys

- Enters channel numbers, text, and remote codes. Also use to enter your parental control PIN
- Clears text and numbers in text fields
- Enters and saves (stores) an entry

What Devices Can I Control?

The four **mode keys** arched across the top of the remote tell the remote which device you want to operate.



Each mode key is associated with different types of devices. You can use each mode key to control *one* of its associated devices:

Mode Key	Associated Devices
STB	IP gateway set-top
TV*	TVs (including HDTVs)
DVD*	DVD players
AUX*	VCRs, receivers, tuners, and Home Theater in a Box (HTIB)

* These keys can be reassigned to control different devices. Go to the **Reassign Mode Keys** section of this guide for instructions.

LED Indicators

There are red LEDs underneath each of the four mode keys (STB, TV, DVD, and AUX) that flash each time a key is pressed to show which device the key is currently controlling.

There are also green LEDs that illuminate several keys whenever the remote is in use. They stay illuminated for a short time after a key is pressed.

During programming, if the remote times out before you complete the code setup, you will need to start over. This is indicated by one long flash of the red LED.

What Devices Do I Want to Control?

To help you keep track of the devices you want to control, list the type of devices you have (including brand) in the following table. Then, use the code tables at the end of this guide to locate the codes for your device. For example, look under **TV Group** if you need to program the remote to operate your TV. If you have two devices that use the same key, you must reassign the TV, DVD, or the AUX key. The STB key cannot be reassigned. Go to **Reassign Mode Keys**. Otherwise, go to **Program the Remote to Control My Devices** for additional instructions.

Mode Key	Device Type	Brand	Code
Example: DVD	DVD	Sony	2066
TV			
DVD			
AUX			



AT6400 AllTouch IR Universal Remote Control

User Guide

Welcome to the Ultimate Control Experience

Your new AT6400 AllTouch® Infrared (IR) Universal Remote Control (remote) is a true universal remote, functioning as four remotes in one. As one example, you can use this remote to operate your set-top, your TV, and two other devices, such as a DVD player and VCR.

Important Information About Your Remote

Your remote is initially programmed to only operate your set-top. Therefore, you must program the remote to operate your TV, VCR, or other devices. See **Program the Remote to Control My Devices** to learn how to enter device codes and program your remote.

Note: You must use the IR remote within line of sight of the set-top to operate the set-top correctly.

How Does A Universal Remote Control Work?

You tell the remote which type of device you want to operate using the four keys arched across the top of the remote. These keys, known as **mode keys**, are labeled **STB**, **TV**, **DVD**, and **AUX**. Each mode key is associated with a specific device. As an example, after programming the remote, if you want the remote to operate your TV, you simply press the TV key. Other keys you press on the remote, thereafter, should operate your TV. Want to switch the remote to operate a different device? Just press the mode key for the next device you want to operate. In this guide, you will learn which types of devices you can control and how to program the remote to control your specific devices.

Where Do I Start?

Before you begin using your remote, complete the following initial setup tasks.

Install the Batteries

The remote requires two AA batteries (alkaline recommended). A diagram in the battery compartment of the remote indicates proper placement of the batteries. When batteries are properly installed, the light on the remote blinks each time a key is pressed.

Visit the Quick Reference Section

Use the Quick Reference section of this guide to familiarize yourself with the remote and the functions of its various keys. Knowing the function and location of the keys on the remote will assist you when you are programming the remote.

Program the Remote

To learn how to program your remote, refer to the sections **What Devices Can I Control**, **What Devices Do I Want to Control**, and **Program the Remote to Control My Devices** for further instructions.

Find a Place to Store Your Remote

Keeping up with one remote is much easier than keeping up with four or five remotes. However, it is still a good idea to find a storage location for your remote. The AT6400 is not a toy. It should be kept out of the reach of children under the age of 6 years.

Program the Remote to Control My Devices

Your remote is initially programmed to only operate your set-top. You will need to set up the remote to operate your other devices using its TV, DVD, and AUX modes. The TV key may be programmed to operate a standard or high-definition television (HDTV). The DVD key may be programmed to operate a DVD player. The AUX key may be programmed to operate a VCR, a receiver, an amplifier, or a Home Theater in a Box (HTIB) system. If the remote provides only limited functionality for a device, you can look for a code that provides more functionality.

Refer to the code tables at the end of this guide to locate additional programming codes.

Note: You have the option to assign some remote keys to operate one device type only. For example, you may want to assign volume control to the TV only. If this is the case, you can reprogram power, volume, and channel control using procedures found later in this guide.

Assigning a Device Code to a Mode Key

1. Refer to the code tables at the end of this guide to locate the information for the device you want to program.

Note: If your device is not listed, you may be able to program the remote using the Auto-Search function. Go to **What If None of the Codes Work** for instructions.

2. Turn on the device that you want to assign to a mode key.

3. Press and hold the appropriate mode key (**TV**, **DVD**, or **AUX**) on the remote, and then press and hold the **OK** key.

4. Release *both* keys and the mode keys blink twice.

5. Enter the first 4-digit setup code for the device using the numeric keys (0-9) on the remote. The mode key blinks three times to indicate that the code entry was accepted.

Notes:

- When an invalid code is entered, the selected mode key displays a long flash to indicate that you have not entered the code correctly.

- Should the remote time-out before you complete the code setup, you must start over. This is indicated by one long flash of the red LED.

6. Point the remote at the device, and press **POWER** to test the device.

7. Did the device power off?


- If **yes**, write this code number in the table found in this guide. You may need it again if the device code is accidentally erased.

- If **no**, repeat this procedure from step 3 using a different setup code.

Note: If none of the codes listed for your brand of device operate the device correctly, go to **What If None of the Codes Work** for instructions.

8. Repeat this procedure for each mode key you want to program.

Quick Reference

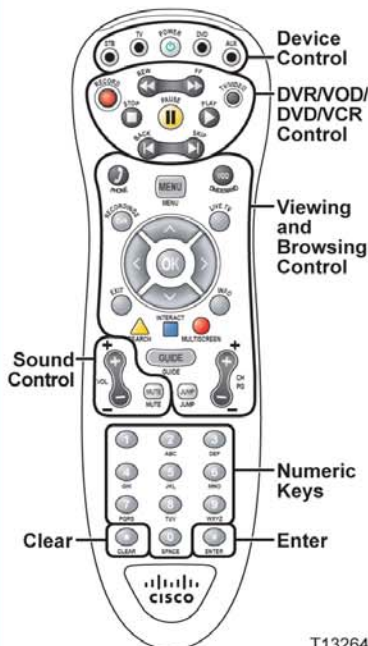

Device Control

- POWER** Turns devices on or off
- STB** Enables set-top mode functions
- TV** Enables TV mode functions
- DVD** Enables DVD mode functions
- AUX** Enables AUX mode functions

DVR, VOD, DVD, VCR Control

Notes:

- In STB mode, these keys control DVR and VOD functions.
- In DVD and AUX modes, these keys may control your DVD or VCR depending on how you have programmed the remote.

- RECORD** Records the selected program
- STOP** Stops DVD, VCR, VOD, or DVR content
- PAUSE** Pauses DVD, VCR, VOD, or DVR content
- PLAY** Plays DVD, VCR, VOD, or DVR content
- INPUT** Scrolls through available TV or video input sources
- REW** / **FF** Rewinds or fast forwards through DVR or VOD content
- BACK** / **SKIP** Skips backward or forward through DVR or VOD content

T13264

What If None of the Codes Work?

If none of the codes listed for your brand of device operate the device correctly, or if your device is not listed in the codes table, you can use the Auto-Search function to search through the code library for a valid code. This section provides procedures for using the Auto-Search function to search the code library for TV, DVD and AUX mode codes.

Note: Read the procedures in this section thoroughly before beginning. You need to be prepared to observe the behavior of the remote.

Auto-Search Features

Consider the following items when using Auto-Search:

- The Auto-Search function begins searching from the first code.
- If a valid code is not found, the green backlight blinks twice and the remote returns to normal operation.
- If any other key is pressed except PLAY, ENTER, POWER, EXIT, REW, FF, or numeric keys 1 through 4 (when programming the AUX mode key), the mode key displays a long red flash (error message) and the remote returns to normal operation.
- Should the remote time-out before you complete the Auto-Search function you must start over. This is indicated by one long flash of the red LED.
- If the device is not listed and the Auto-Search function is unable to find a usable code, you may need to use the original remote provided with the device.

Auto-Searching the Code Library for TV or DVD Mode Codes (Program Code 922)

Note: This procedure only applies to TVs and DVDs.

- Turn on the device you that you want to assign to the TV or DVD key.
- Point the remote at the device.
- Press and *while holding* a selected mode key (TV or DVD), press the **OK** key. For example, to search for a TV code, press and hold **TV** and **OK** at the same time.
- Release *both* keys and all the mode keys blink twice.

- Enter the programming code **9 2 2** by pressing the numeric keys on the remote. The mode key you selected in step 3 blinks twice to indicate a successful entry.
- Point the remote toward the device, and press **PLAY**.
- Your device powers off when it finds the correct code. Then, choose one of the following options:
 - Save code and exit** – Press the **ENTER** key on the remote to program the code in the remote and the mode key flashes three times indicating successful entry.
 - Step forward** – Press the fast-forward (FF) key on the remote to step ahead through the codes one at a time. Then, return to step 6.
 - Step backward** – Press the rewind (REW) key on the remote to step back through the codes one at a time. Then, return to step 6.
 - Exit without saving the code** – Press the **EXIT** key on the remote. The selected mode key flashes three times and returns to normal operation.
 - Send the current code** – Press the **POWER** key on the remote to send the current code. If the device turns back on, press the **ENTER** key. If the device does not turn on, return to step 6.
 - Continue with auto-search function** – Press the **PLAY** key on the remote to continue with the auto-search function. Then, return to step 6.

Auto-Searching the Code Library for AUX Mode Codes (Program Code 922)

- Turn on the device that you want to assign to the AUX key.
- Point the remote at the device.
- Press and *while holding* the **AUX** key, press the **OK** key.
- Release *both* the **AUX** key and the **OK** key and all the mode keys blink twice.
- Enter the programming code **9 2 2** by pressing the numeric keys on the remote. The AUX key blinks twice indicating a successful entry.
- Press the **PLAY** key, choose one of the following device categories and then, using the number keys on the remote, press its assigned number (1 – 4) based on the following list:

1 = VCRs	2 = Receiver/Tuners
3 = Amplifiers	4 = HTIB

Note: The device categories are number-coded to provide a more direct programming method.

- Point the remote toward the device, and press **PLAY**.
- Your device powers off when it finds the correct code. Then, choose one of the following options:
 - Save code and exit** – Press the **ENTER** key on the remote to program the code in the remote and the mode key flashes three times indicating successful entry.
 - Step forward** – Press the fast-forward (FF) key on the remote to step ahead through the codes one at a time. Then, return to step 7.
 - Step backward** – Press the rewind (REW) key on the remote to step back through the codes one at a time. Then, return to step 7.
 - Exit without saving the code** – Press the **EXIT** key on the remote. The selected mode key flashes three times and returns to normal operation.
 - Send the current code** – Press the **POWER** key on the remote to send the current code. If the device turns back on, press the **ENTER** key. If the device does not turn on, return to step 7.
 - Continue with auto-search function** – Press the **PLAY** key on the remote to continue with the auto-search function. Then, return to step 7.

Reassign Mode Keys

You can reassign a mode key to operate a different device. For example, you can reassign the AUX key to operate a DVD player or a TV. If you reassign a key, be sure you update the table found in this guide.

Reassigning Mode Keys (Program Code 944)

- Press and hold the **STB** mode key on the remote.
- Without releasing the **STB** key, press and hold the **OK** key.
- Release *both* the keys and all mode keys flash twice.
- Enter the programming code **9 4 4** by pressing the numeric keys on the remote. The **STB** mode key blinks twice indicating a successful entry.
- Press and release the mode key associated with the type of device you want to control, and then press and release the mode key that you want to change. The newly assigned mode key blinks one time indicating a successful entry.

Viewing and Browsing Control

- Accesses the phone menu
- Accesses the Interactive Program Guide (IPG)
- Accesses the On Demand menu
- Accesses the DVR list of recordings
- Views live TV
- Moves through selections
- Selects and deselects screen items
- Clears all menu screens and returns to broadcast TV
- Accesses the Search menu
- Accesses INTERACT content (Internet and interactive content)
- Turns MultiScreen mode on or off
- Displays text information about the selected program
- Displays or closes the IPG
- Jumps to next section or switches to last channel viewed
- Selects the next channel, up or down, when watching TV. Moves up or down one page in the IPG and in some menu screens

Sound Control

Note: These keys are assigned to the TV when the TV mode key is programmed with a valid code.

- Adjusts volume
- Mutes sound

Numeric Keys

- Enters channel numbers, text, and remote codes. Also use to enter your parental control PIN
- Clears text and numbers in text fields
- Enters and saves (stores) an entry

What Devices Can I Control?

The four **mode keys** arched across the top of the remote tell the remote which device you want to operate.



Each mode key is associated with different types of devices. You can use each mode key to control one of its associated devices:

Mode Key	Associated Devices
STB	IP gateway set-top
TV*	TVs (including HDTVs)
DVD*	DVD players
AUX*	VCRs, receivers, tuners, and Home Theater in a Box (HTIB)

* These keys can be reassigned to control different devices. Go to the **Reassign Mode Keys** section of this guide for instructions.

LED Indicators

There are red LEDs underneath each of the four mode keys (STB, TV, DVD, and AUX) that flash each time a key is pressed to show which device the key is currently controlling.

There are also green LEDs that illuminate several keys whenever the remote is in use. They stay illuminated for a short time after a key is pressed.

During programming, if the remote times out before you complete the code setup, you will need to start over. This is indicated by one long flash of the red LED.

What Devices Do I Want to Control?

To help you keep track of the devices you want to control, list the type of devices you have (including brand) in the following table. Then, use the code tables at the end of this guide to locate the codes for your device. For example, look under **TV Group** if you need to program the remote to operate your TV. If you have two devices that use the same key, you must reassign the TV, DVD, or the AUX key. The **STB** key cannot be reassigned. Go to **Reassign Mode Keys**. Otherwise, go to **Program the Remote to Control My Devices** for additional instructions.

Mode Key	Device Type	Brand	Code
<i>Example: DVD</i>	DVD	Sony	2066
TV			
DVD			
AUX			

Some common examples:

- To program the AUX key to operate your DVD player, press **DVD** and then **AUX**.
- To program the DVD key to operate your TV, press **TV** and then **DVD**.

Change Volume Control

By default, once the TV mode key is programmed with a valid code, the volume and mute buttons control your TV. These keys adjust the volume of your TV higher, lower, or temporarily switch the volume off (Mute), regardless of whether the remote is in STB, TV, DVD, or AUX mode.

If you prefer, you can choose to have the volume and mute buttons always control a different device rather than your TV, such as a home theater receiver. (See **Controlling Volume for One Device** below.) Note that you must first program one of the mode keys, such as AUX, with a valid code for that device.

Alternatively, you can choose to have the volume and mute buttons control different devices when the remote is in different modes. For example, you might want to control the volume on your TV when in TV mode, but the volume on your home theater receiver when in AUX mode. (See **Controlling Volume for Different Devices** below.) Note that not all devices have volume controls, so if you choose this option, the volume and mute buttons may do nothing in some modes, such as STB and DVD.

Controlling Volume for One Device (Program Code 955)

1. Press and hold the **STB** mode key on the remote.
2. Without releasing the **STB** key, press and hold the **OK** key.
3. Release *both* keys and all mode keys blink twice.
4. Enter the programming code **9 5 5** by pressing the number keys on the remote. The STB mode key blinks twice indicating a successful entry.
5. Press and release the mode key for the device you want the volume keys to control. For example, if you want to control volume through your TV, press and release **TV**. The selected mode key blinks three times to indicate a successful entry.

The volume keys now control only one device whether you are in STB, TV, DVD, or AUX mode.

Controlling Volume for Different Devices (Program Code 955)

1. Complete steps 1 through 4 of the **Controlling Volume for One Device** procedure.
2. Press and release the **Enter** key. The STB mode key blinks three times to indicate a successful entry.

After you press the **Enter** key, the volume keys control the device assigned to that mode. For example, in TV mode, the volume keys control volume for the TV only.

Notes:

- If any other key is pressed except the Mode keys and the **ENTER** key, the remote does not accept any changes or updates. The STB mode key displays a long red flash and the remote returns to normal operation.
- If the remote times out before you complete programming volume control, the remote does not accept any changes. You must start over from step 1 of this procedure.

Change Channel Control

The remote is set by default to control channel selection on the set-top. You can also program channel control to control any of the TV, DVD, or AUX mode devices provided the device allows for channel control assignment. Or, you can set the channel selection control programming to control channels (or page up or down) for all of the devices programmed in the four mode keys. Otherwise, you can only control channels (or page up or down) on a specific device, for example, the TV or DVD.

Note: The channel control keys include CH/Page, Jump, and the numeric keys 0 through 9.

Controlling Channels for One Device (Program Code 966)

1. Press and hold the **STB** mode key on the remote.
2. Without releasing the **STB** key, press and hold the **OK** key.
3. Release *both* keys and all mode keys blink twice.
4. Enter the programming code **9 6 6** by pressing the numeric keys on the remote. The STB mode key blinks twice to indicate a successful entry.
5. Press and release the mode key for the device you want the channel key to control. For example, if you want to control channels on your TV, press and release **TV**. The selected mode key blinks three times to indicate a successful entry.

The channel key now always controls the device associated with the mode you selected in this procedure, whether in STB, TV, DVD, or AUX mode.

Controlling Channels for Different Devices (Program Code 966)

1. Complete steps 1 through 4 of the **Controlling Channels for One Device** procedure.
2. Press and release the **Enter** key. The STB mode key blinks three times to indicate a successful entry.

After you press the **Enter** key, the channel key now controls the device associated with the mode key you select. For example, in TV mode, the channel key controls the TV, but in STB mode, the channel key controls the set-top.

Notes:

- If any other key is pressed except the Mode keys and the **ENTER** key, the remote does not accept any changes or updates. The STB mode key displays a long red flash and the remote returns to normal operation.
- If the remote times out before you complete programming channel selection control, the remote does not accept any changes. You must start over from step 1 of this procedure.

Change Power Control

The POWER key on the remote is set by default to control the power switch on one device at a time, in either mode (STB, TV, DVD, or AUX). When in STB mode, the remote switches the set-top from OFF (standby mode) to ON, or from ON to OFF (standby mode). However, you can alternatively program the POWER key to control the power switch on up to four devices at the same time, instead of controlling one device at a time. It is highly recommended that you set up the POWER key to turn on and off your set-top and your TV at the same time. Turning off the set-top saves electricity and extends the life of the box. When turned off, the set-top can *still* record scheduled programs on its DVR and perform any other necessary functions.

Controlling Power for Multiple Devices at Once (Program Code 977)

1. Press and hold the **STB** mode key on the remote.
2. Without releasing the **STB** key, press and hold the **OK** key.
3. Release *both* keys and all mode keys blink twice.
4. Enter the programming code **9 7 7** by pressing the numeric keys on the remote. The STB mode key blinks twice to indicate a successful entry.
5. For the first device, press the **STB** key. The STB mode key blinks twice.
6. For the second device, press the applicable mode key (TV, DVD, or AUX). The selected mode key blinks twice.
7. Repeat step 6 for up to two more devices (total of four devices).
8. Press the **ENTER** key to complete the power switch control programming. The last selected mode key blinks 3 times to indicate a successful entry.

Example: In an example scenario where you press only TV in steps 6 and 7, the POWER key controls *both* the set-top and the TV at the same time, regardless of which mode the remote is in (STB, TV, DVD, or AUX).

Controlling Power for One Device at a Time (Program Code 977)

1. Complete steps 1 through 4 of the **Controlling Power for Multiple Devices at Once** procedure.
2. Press the **ENTER** key to complete the power switch control programming. The last selected mode key blinks 3 times to indicate a successful entry.

After you select a mode, the POWER key controls the device assigned to that mode. For example, in TV mode, the remote controls power for the TV only.

Notes:

- If any other key is pressed except the Mode keys and the **ENTER** key, the remote does not accept any changes or updates. The STB mode key displays a long red flash and the remote returns to normal operation.
- If the remote times out before you complete programming power switch control, the remote does not accept any changes. You must start over from step 1 of this procedure.

VCR, continued

Teknika	3016, 3021, 3050
Thomas	3211
Toshiba	3011, 3029, 3030, 3038, 3096, 3098, 3099, 3102, 3103, 3141, 3142, 3149, 3165, 3166, 3167, 3168, 3180, 3182, 3185, 3210, 3219, 3220, 3223, 3227, 3241
Touch	3223
Vector Research	3005, 3006, 3011
Victor	3006
Video Concepts	3005, 3006, 3011
Viewsonic	3223
Voodoo	3223
Wards	3001, 3011, 3016, 3021, 3023, 3047, 3052
Westinghouse	3002
XR-1000	3016, 3021
Yamaha	3005, 3006, 3007, 3014, 3055
Zenith	3048, 3051, 3056, 3064, 3072, 3097, 3119, 3143, 3144, 3186, 3196, 3198, 3202, 3204, 3211, 3213
ZT Group	3223

Combination Device Codes

If you have a combination device, you may need to reassign the AUX key to operate one of the devices, for example, the VCR. The following tables provide some examples of combination devices. If your combination device is not listed, simply look for the codes for each separate device.

DVD/VCR Combo

	DVD	VCR
Apex	2229	3189
Broksonic	2072	3082
CineVision	2230	3242
Daewoo	2062	3076
Emerson	2073	3083
Go Video	2046, 2127, 2128, 2230, 2239, 2129	3066, 3110, 3109, 3188, 3193, 3221
Hitachi	2126, 2173	3117, 3169
Insignia	2369	3239
JVC	2047, 2097, 2166, 2232, 2166, 2359, 2360, 2361, 2362, 2364, 2365, 2366, 2367	3067, 3118, 3170, 3194, 3171, 3228, 3229, 3230, 3231, 3234, 3235, 3236, 3237
LG	2363, 2368	3233, 3238
Magnavox	2237	3190
Panasonic	2066, 2167, 2228	3078, 3172, 3191
Philips	2051, 2169	3071, 3173
Polaroid	2007	3111
RCA	2048, 2165, 2172	3068, 3174, 3175
Samsung	2049, 2074, 2085, 2233, 2290, 2311	3069, 3084, 3101, 3184, 3214, 3218, 3232
Sanyo	2050	3070
Sharp	2170, 2174	3176, 3177
Sony	2065, 2067, 2171, 2238, 2244, 2067, 2356, 2356, 2357	3104, 3085, 3179, 3187, 3192, 3178, 3224, 3225, 3226, 3240
Toshiba	2080, 2084, 2168, 2235, 2312, 2358	3103, 3102, 3180, 3185, 3219, 3227, 3241
Zenith	2052, 2128, 2234, 2236	3072, 3119, 3186, 3186

TV/DVD Combo

	TV	DVD
Akai	1427	2378
Apex	1163	2095
Axon	1459	2379
Bang & Olufsen	1453	2370
Broksonic	1114	2053
Coby	1460	2380
Cytron	1456	2374
Diamond/Vision	1461	2382
Hitachi	1226	2240
ilo	1457	2375
Initial	1457	2381
JVC	1288	2206
LG	1255	2371
Mintek	1457	2281
Panasonic	1289	2207
Philips	1290, 1291, 1337	2208, 2209, 2243
Polaroid	1458, 1440	2377, 2409
RCA	1115, 1162, 1379	2063, 2099, 2289
Sansui	1122	2071
Sylvania	1150, 1464	2092, 2408
Toshiba	1116, 1293, 1294, 1345	2054, 2210, 2231
Westinghouse	1454	2372

TV/Receiver Combo

Brand	TV	Receiver
Philips	1390	5138
Polaroid	1393	5141

TV/VCR Combo

Brand	TV	VCR
Broksonic	1121, 1382, 1383	3081, 3213, 3202
Daewoo	1298	3150
Emerson	1382, 1383	3213, 3202
GE	1164, 1380, 1381	3090, 3201, 3203
JVC	1299	3151
Magnavox	1300, 1301, 1302, 1321	3152, 3153, 3154, 3181
Magnin	1380	3201
MGA	1380	3201
Mitsubishi	1381	3203
Orion	1382, 1383	3213, 3202
Panasonic	1305, 1306	3158, 3159
Penney	1380	3201
Philips	1307, 1308	3160, 3152
Quasar	1165, 1166	3091, 3092
RCA	1167, 1168, 1310, 1380, 1381	3093, 3094, 3162, 3201, 3203
Samsung	1161	3089
Sansui	1382, 1383	3213, 3202
Sanyo	1380	3201
Sharp	1311, 1312	3163, 3164
Sylvania	1145	3095
Toshiba	1006, 1267, 1313, 1315, 1319	3096, 3166, 3165, 3166, 3167, 3182
Zenith	1118, 1382, 1383	3097, 3213, 3202

TV/DVD/Tuner Combo

	TV	DVD	Tuner
Audiovox	1455	2373	5152

TV/DVD/VCR Combo

	TV	DVD	VCR
Magnavox	1339	2241	3183
Panasonic	1123, 1152	2075, 2076	3087, 3086
RCA	1151	2077	3106
Samsung	1297	2214	3148
Sharp	1153, 1378	2086, 2292	3100, 3200
Sylvania	1027, 1124, 1296	2064, 2078, 2213	3105, 3088, 3147
Toshiba	1154, 1158, 1338	2093, 2094	3099, 3098, 3149

TV/VCR/Tuner Combo

	TV	VCR	Tuner
Panasonic	1303, 1304	3155, 3156, 3157	5109, 5110, 5111
Philips	1309	3161	5112

TV/DVD/VCR/Tuner Combo

	TV	DVD	VCR	Tuner
Panasonic	1292, 1295	2211, 2212	3145, 3146	5107, 5108

Device Program Codes

If you program codes to control devices, record your codes here for easy reference:

Mode Key	Device Type	Brand	Code
Example: DVD	DVD	Sony	2066
TV			
DVD			
AUX			

FCC Compliance

United States FCC Compliance

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against such interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy. If not installed and used in accordance with the instructions, it may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment OFF and ON, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna, if applicable.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the cable company or an experienced radio/television technician for help.

Any changes or modifications not expressly approved by Scientific-Atlanta, Inc., could void the user's authority to operate the equipment. The information shown in the FCC Declaration of Conformity paragraph below is a requirement of the FCC and is intended to supply you with information regarding the FCC approval of this device. The phone numbers listed are for FCC-related questions only and not intended for questions regarding the connection or operation for this device. Please contact your cable service provider for any questions you may have regarding the operation or installation of this device.

FCC Declaration of Conformity

This device complies with Part 15 of FCC Rules. Operation is subject to the following two conditions: 1) the device may not cause harmful interference, and 2) the device must accept any interference received, including interference that may cause undesired operation.

AllTouch IR Universal Remote Control
AT6400
Scientific-Atlanta, Inc.
5030 Sugarloaf Parkway
Lawrenceville, Georgia 30044 USA
Telephone: 770-236-1077

Canada EMI Regulation

This Class B digital apparatus complies with Canadian ICES-003.
Cet appareil numérique de la class B est conforme à la norme NMB-003 du Canada.

20060628 FCC Standard



Scientific Atlanta, A Cisco Company
5030 Sugarloaf Parkway
Box 46547
Lawrenceville, GA 30042
678.277.1000
www.scientificatlanta.com

Cisco, Cisco Systems, the Cisco logo, the Cisco Systems logo, Scientific Atlanta, and AllTouch are registered trademarks or trademarks of Cisco Systems, Inc. and/or its affiliates in the U.S. and certain other countries. All other trademarks shown are trademarks of their respective owners. Product and service availability subject to change without notice. © 2007-2008 by Cisco Systems, Inc. All rights reserved. July 2008 Remote Control Part Number 4021830 (Linux version) User Guide Part Number 4019792 Rev B